ASSEMBLY INSTRUCTIONS FOR FOLD DOWN SHELF

BUL10190 REV. A

PAGE 1 OF 4

Showing direct mount to door
IDS6 on 600 mm (23 in.) wide door
IDS7 on 700 mm (28in.) and 800 mm (31.5 in.)
wide doors


ASSEMBLY INSTRUCTIONS:

- A) Install shelf mounting brackets (item 2) onto 8-32 studs on inside of door as shown. Secure to door using 8-32 KEP nuts (item 5) 4 places
- B) Adhere self sticking gasket piece (item 4) and shelf support stop (item 3) to shelf support typical each side of shelf.
- C) Locate shelf on bracket by retracting plunger lock/hinge and inserting through aligned holes on both brackets at the desired height.

	PARTS LIST	
ITEM No.		QTY
		Q(11
1	FOLD DOWN SHELF	1
2	SHELF MOUNTING BRACKETS	2
3	SHELF SUPPORT STOP RUBBER	2
4	GASKET PIECE SHELF SUPPORT	2
5	8-32 KEP NUTS	4



11/32" Socket Wrench

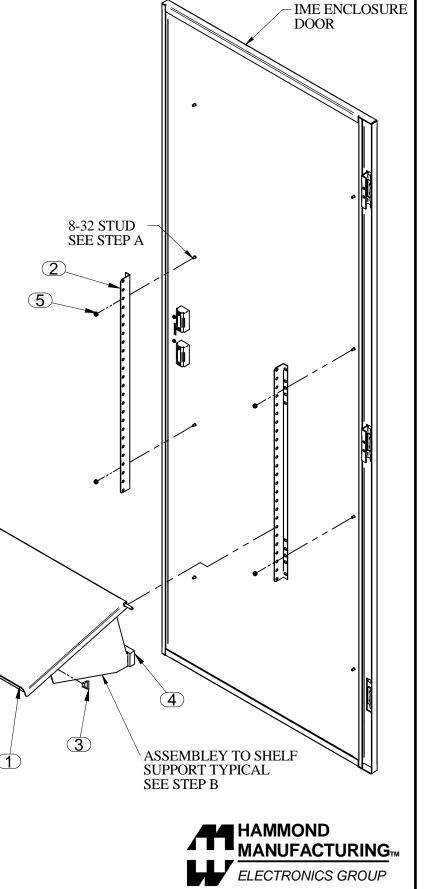

visit our website @ www.hammondmfg.com

ASSEMBLY INSTRUCTIONS FOR FOLD DOWN SHELF

BUL10190 REV. A


PAGE 2 OF 4

Showing fold down shelf with door mounting rails installed

IDS6 on 600 mm (23 in.) wide door IDS7 on 700 mm (28in.) and 800 mm (31.5 in.) wide doors

ASSEMBLY INSTRUCTIONS:

- A) Remove 8-32 nuts from center 4 studs on door mounting rails.
- B) Install shelf mounting brackets (item 2) onto same 8-32 studs on inside of door used to secure door rails see detail A. Secure to door using 8-32 KEP nuts (item 5) 4 places.
- C) Adhere self sticking gasket piece (item 4) and shelf support stop (item 3) to shelf support typical each side of shelf.
- D) Locate shelf on bracket by retracting plunger lock/hinge and inserting through aligned holes on both brackets at the desired height.

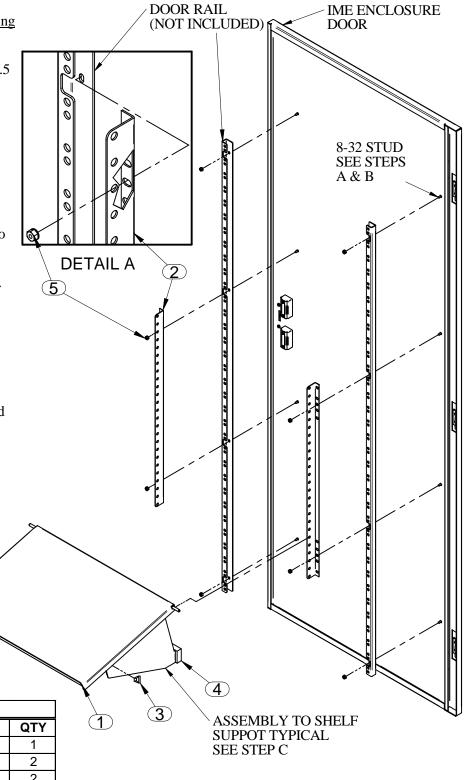

PARTS LIST		
ITEM No.	DESCRIPTION	QTY
1	FOLD DOWN SHELF	1
2	SHELF MOUNTING BRACKETS	2
3	SHELF SUPPORT STOP RUBBER	2
4	GASKET PIECE SHELF SUPPORT	2
5	8-32 KEP NUTS	4



11/32" Socket Wrench



visit our website @ www.hammondmfg.com

ASSEMBLY INSTRUCTIONS FOR FOLD DOWN SHELF

IME ENCLOSURE


DOOR

8-32 STUD SEE

STEP A


BUL10190 REV. A

PAGE 3 OF 4



ASSEMBLY INSTRUCTIONS:

- A) Install bridge (item 3) onto 8-32 studs on inside of door. Fasten using 8-32 KEP nuts (item 6) 4 places.
- B) Install shelf mounting brackets (item 2) onto 8-32 studs that are on the bridge using 8-32 KEP nuts (item 6) 4 places.
- C) Adhere self sticking gasket piece (item 5) and shelf support stop (item 4) to shelf support typical each side of shelf.
- D) Locate shelf on bracket by retracting plunger lock/hinge and inserting through aligned holes on both brackets at the desired height.

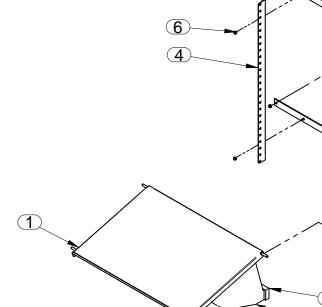

PARTS LIST				
ITEM No.	DESCRIPTION	QTY		
1	FOLD DOWN SHELF	1		
2	SHELF MOUNTING BRACKETS	2		
3	BRIDGE	2		
4	SHELF SUPPORT STOP RUBBER	2		
5	GASKET PIECE SHELF SUPPORT	2		
6	8-32 KEP NUTS	8		

TOOL BOX

11/32" Socket Wrench



visit our website @ www.hammondmfg.com

3

ASSEMBLY TO SHELF SUPPOT TYPICAL SEE STEP C


ASSEMBLY INSTRUCTIONS FOR FOLD DOWN SHELF

BUL10190 REV. A

PAGE 4 OF 4

8-32 STUD SEE STEPS


A & B



IDS7 on 1000 mm (39 in.) wide doors

ASSEMBLY INSTRUCTIONS:

- A) Remove 8-32 nuts from center 4 studs on door mounting rails.
- B) Install bridge (item 3) onto same 8-32 studs on inside of door used to secure door rails. See detail A. Use 8-32 KEP nuts (item 6) 4 places.
- C) Install shelf mounting brackets (item 2) onto 8-32 studs that are on the bridge using 8-32 KEP nuts (item 6) 4 places.
- D) Adhere self sticking gasket piece (item 5) and shelf support stop (item 4) to shelf support typical each side of shelf.
- E) Locate shelf on bracket by retracting plunger lock/hinge and inserting through aligned holes on both brackets at the desired height.



SEE STEP D

DOOR RAIL (NOT INCLUDED)

DETAIL A

6)

8-32 STUD

ON BRIDGE

SEE STEP C

		TARTOLIOT	
	ITEM No.	DESCRIPTION	QTY
	1	FOLD DOWN SHELF	1
	2	SHELF MOUNTING BRACKETS	2
	3	BRIDGE	2
	4	SHELF SUPPORT STOP RUBBER	2
	5	GASKET PIECE SHELF SUPPORT	2
	6	8-32 KEP NUTS	8



11/32" Socket Wrench



visit our website @ www.hammondmfg.com